



3 AIR FLOW ELEMENT INSTALLATION DETAILS
1:2

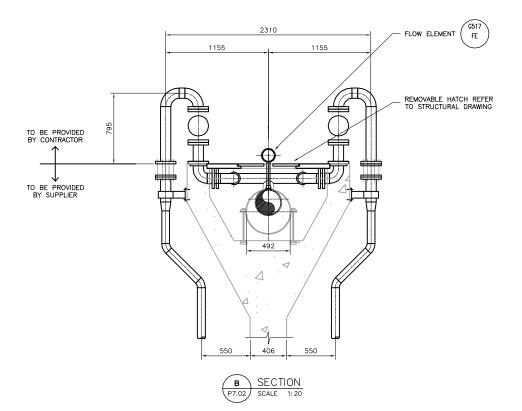

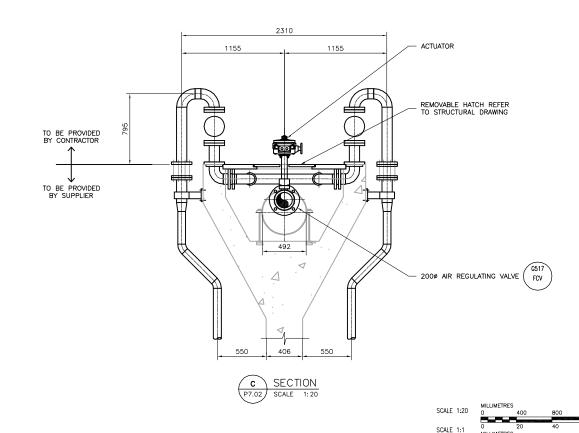

NOTE

- 1. FLOW ELEMENTS G516-FE AND G518-FE ARE TO BE INSTALLED HORIZONTALLY.
- 2. FLOW ELEMENTS G517-FE AND G519-FE ARE TO BE INSTALLED VERTICALLY.
- 3. REFER TO VENDOR DRAWINGS AND DOCUMENTATION FOR INSTRUCTION AND CONTROL DEVICES AND I/O REQUIREMENTS.

