UPS-1 INSTRUCTIONS

Startup Procedure

- 1. Turn the Manual Bypass Switch to the Bypass position.
- 2. Ensure that the "Normal Power" breaker is closed and supplying power.
- 3. Close the "UPS" supply breaker to provide power to the UPS.
- 4. Turn on the UPS battery circuit breaker, located at the rear of the UPS.
- 5. Using the ↑ button, select the *Control* menu and press the → button.
- 6. Press ← to select the *Go to Bypass Mode* option.
- 7. Wait for the -○→ indicator to illuminate on the UPS.
- 8. Turn the Manual Bypass Switch to the UPS position.
- 9. Press the ← button to select the *Go To Normal Mode* option.
- 10. Press the ESC button until the Eaton Powerware logo appears.

Shutdown Procedure

- 1. Using the \uparrow button, select the *Control* menu and press the \rightarrow button.
- 2. Press ← to select the *Go to Bypass Mode* option.
- 3. Wait for the -⊙→ indicator to illuminate on the UPS.
- 4. Turn the Manual Bypass Switch from the UPS position to the Bypass position.
- 5. Press the ↑ button on the front panel display and then press the → button to select the *TURN UPS ON/OFF* menu.
- 6. Press the ↓ button to select the *TURN UPS OFF* option; press the ← button.
- 7. Confirm the selection. Press and hold the ← button for three seconds, until the UPS stops beeping.
- 8. Turn off the UPS battery circuit breaker, located at the rear of the UPS.
- 9. Open the "UPS" source breaker.



