Part 1 General

1.1 SUMMARY

- .1 Section Includes:
 - .1 Concrete housekeeping pads, hangers and supports for mechanical piping and equipment.

1.2 REFERENCES

- .1 American National Standards Institute/American Society of Mechanical Engineers (ANSI/ASME)
 - .1 ANSI/ASME B31.1, Power Piping.
- .2 American Society for Testing and Materials International (ASTM)
 - .1 ASTM A125, Specification for Steel Springs, Helical, Heat-Treated.
 - .2 ASTM A307, Specification for Carbon Steel Bolts and Studs, 60,000 PSI Tensile Strength.
 - .3 ASTM A563, Specification for Carbon and Alloy Steel Nuts.
- .3 Health Canada/Workplace Hazardous Materials Information System (WHMIS)
 - .1 Material Safety Data Sheets (MSDS).
- .4 Manufacturer's Standardization Society of the Valves and Fittings Industry (MSS)
 - .1 MSS SP58, Pipe Hangers and Supports Materials, Design and Manufacture.
 - .2 ANSI/MSS SP69, Pipe Hangers and Supports Selection and Application.
 - .3 MSS SP89, Pipe Hangers and Supports Fabrication and Installation Practices.
- .5 Underwriter's Laboratories of Canada (ULC)

1.3 SYSTEM DESCRIPTION

- .1 Design Requirements:
 - .1 Construct pipe hanger and support to manufacturer's recommendations utilizing manufacturer's regular production components, parts and assemblies.
 - .2 Base maximum load ratings on allowable stresses prescribed by ASME B31.1 or MSS SP58.
 - .3 Ensure that supports, guides, anchors do not transmit excessive quantities of heat to building structure.
 - .4 Design hangers and supports to support systems under conditions of operation, allow free expansion and contraction, prevent excessive stresses from being introduced into pipework or connected equipment.
 - .5 Provide for vertical adjustments after erection and during commissioning. Amount of adjustment in accordance with MSS SP58.

Part 2 Products

2.1 GENERAL

- .1 Fabricate hangers, supports and sway braces in accordance with ANSI B31.1 and MSS SP58.
- .2 Use components for intended design purpose only. Do not use for rigging or erection purposes.

2.2 PIPE HANGERS

- .1 Finishes:
 - .1 Pipe hangers and supports: galvanized
 - .2 Ensure steel hangers in contact with copper piping are epoxy coated. Alternatively, the use of copper hangers is acceptable.
- .2 Upper attachment to concrete:
 - .1 Ceiling: carbon steel welded eye rod, clevis plate, clevis pin and cotters with weldless forged steel eye nut. Ensure eye 6 mm minimum greater than rod diameter.
 - .2 Concrete inserts: wedge shaped body with knockout protector plate, UL listed to MSS SP69.
- .3 Hanger rods: threaded rod material to MSS SP58:
 - .1 Ensure that hanger rods are subject to tensile loading only.
 - .2 Provide linkages where lateral or axial movement of pipework is anticipated.
- .4 Pipe attachments: material to MSS SP58:
 - .1 Attachments for steel piping: carbon steel.
 - .2 Attachments for copper piping: copper plated black steel.
 - .3 Use insulation shields for hot pipework.
 - .4 Oversize pipe hangers and supports.
- .5 Adjustable clevis: material to MSS SP69, clevis bolt with nipple spacer and vertical adjustment nuts above and below clevis.
- .6 Yoke style pipe roll: carbon steel yoke, rod and nuts with cast iron roll, to MSS SP69.
- .7 U-bolts: carbon steel to MSS SP69 with 2 nuts at each end to ASTM A563.
 - .1 Finishes for steel pipework: galvanized.
 - .2 Finishes for copper, glass, brass or aluminum pipework: epoxy coated if required.
- .8 Pipe rollers: cast iron roll and roll stand with carbon steel rod to MSS SP69.

2.3 INSULATION PROTECTION SHIELDS

- .1 Insulated cold piping:
 - .1 64 kg/m³ density insulation plus insulation protection shield to: MSS SP69, galvanized sheet carbon steel. Length designed for maximum 3 m span.

- .2 Insulated hot piping:
 - .1 Curved plate 300 mm long, with edges turned up, welded-in centre plate for pipe sizes NPS 12 and over, carbon steel to comply with MSS SP69.

2.4 EQUIPMENT SUPPORTS

.1 Fabricate equipment supports not provided by equipment manufacturer from structural grade steel.

2.5 HOUSE-KEEPING PADS

.1 Provide concrete housekeeping pads for base-mounted equipment; size pads 150 mm larger than equipment.

Part 3 Execution

3.1 MANUFACTURER'S INSTRUCTIONS

.1 Compliance: comply with manufacturer's written recommendations or specifications, including product technical bulletins, handling, storage and installation instructions, and datasheet.

3.2 INSTALLATION

- .1 Install in accordance with:
 - .1 Manufacturer's instructions and recommendations.
- .2 Clevis plates:
 - .1 Attach to concrete with 4 minimum concrete inserts, one at each corner.
- .3 Provide supplementary structural steelwork where structural bearings do not exist or where concrete inserts are not in correct locations.

3.3 HANGER SPACING

- .1 Plumbing piping: to Canadian Plumbing Code, Provincial Code & Authority having Jurisdiction.
- .2 Gas piping: up to NPS 1/2: every 1.8 m.
- .3 Copper piping: up to NPS 1/2: every 1.5 m.
- .4 Flexible joint roll groove pipe: in accordance with table below, but not less than one hanger at joints.
- .5 Within 300 mm of each elbow.

Maximum Pipe Size: NPS	Maximum Spacing Steel	Maximum Spacing Copper
up to 1-1/4	2.1 m	1.8 m
1-1/2	2.7 m	2.4 m
2	3.0 m	2.7 m
2-1/2	3.6 m	3.0 m
3	3.6 m	3.0 m

Maximum Pipe Size: NPS	Maximum Spacing Steel	Maximum Spacing Copper
3-1/2	3.9 m	3.3 m
4	4.2 m	3.6 m
5	4.8 m	
6	5.1 m	
8	5.7 m	
10	6.6 m	
12	6.9 m	

.6 Pipework greater than NPS 12: to MSS SP69.

3.4 HANGER INSTALLATION

- .1 Install hanger so that rod is vertical under operating conditions.
- .2 Adjust hangers to equalize load.
- .3 Support from structural members. Where structural bearing does not exist or inserts are not in suitable locations, provide supplementary structural steel members.

3.5 HORIZONTAL MOVEMENT

- .1 Angularity of rod hanger resulting from horizontal movement of pipework from cold to hot position not to exceed 4 degrees from vertical.
- .2 Where horizontal pipe movement is less than 13 mm, offset pipe hanger and support so that rod hanger is vertical in the hot position.

3.6 FINAL ADJUSTMENT

- .1 Adjust hangers and supports:
 - .1 Ensure that rod is vertical under operating conditions.
 - .2 Equalize loads.
- .2 Adjustable clevis:
 - .1 Tighten hanger load nut securely to ensure proper hanger performance.
 - .2 Tighten upper nut after adjustment.
- .3 C-clamps:
 - .1 Follow manufacturer's recommended written instructions and torque values when tightening C-clamps to bottom flange of beam.
- .4 Beam clamps:
 - .1 Hammer jaw firmly against underside of beam.

END OF SECTION