


Single Timber Edging With Cap

SCD-651

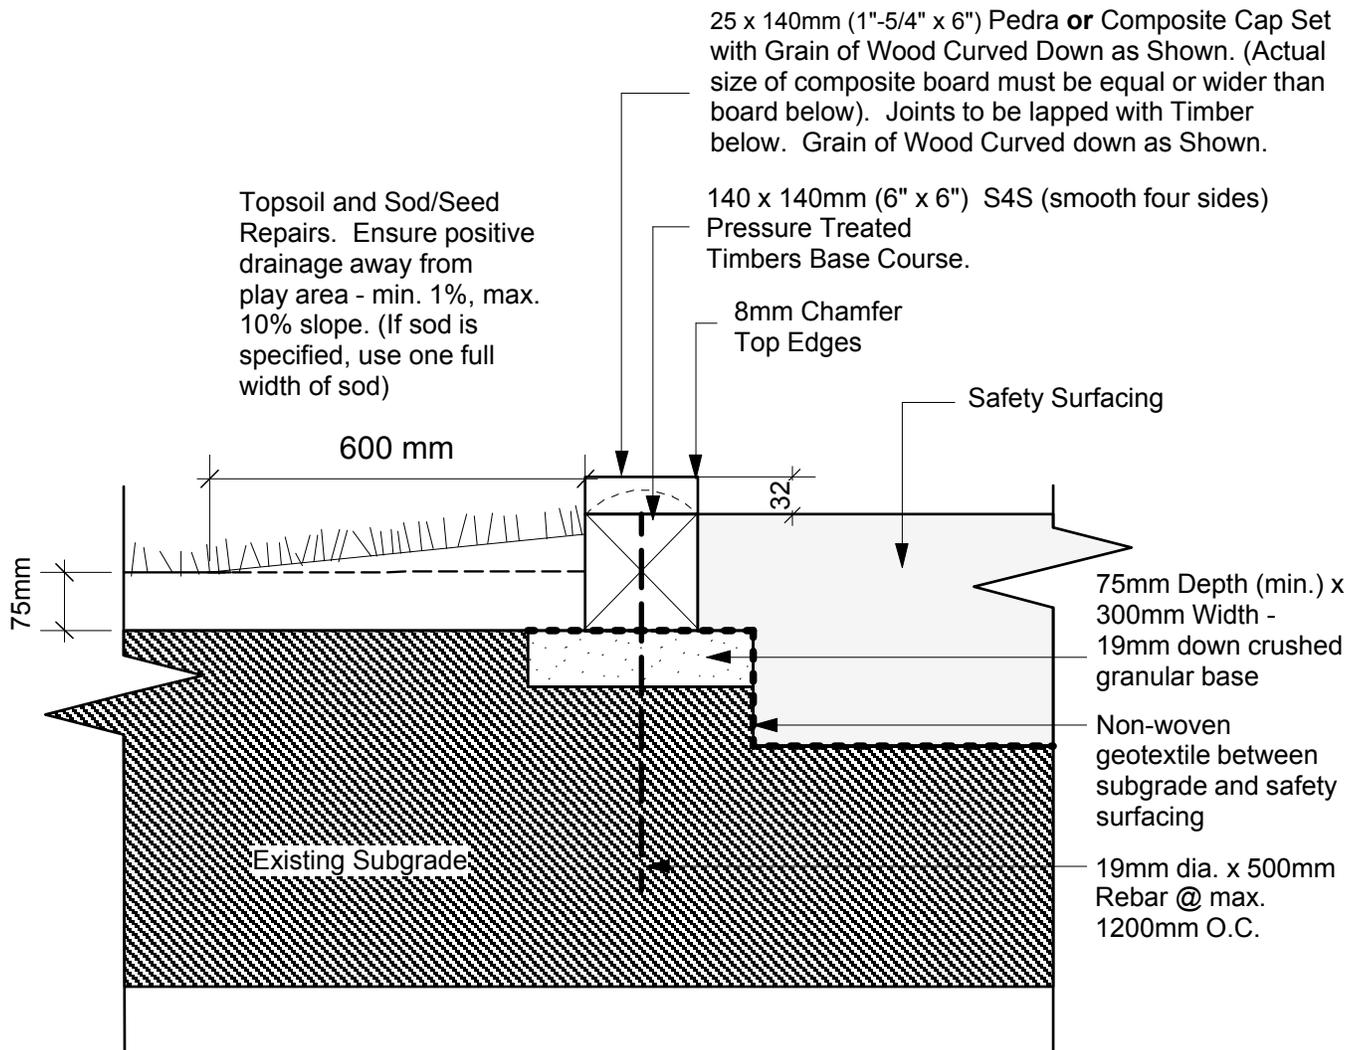

Base course timber :

- shall be pinned with minimum of two (2) 19mm dia. rebar @ max. 1200mm O.C.

Cap:

- shall be pre-drilled and screwed down using screws treated for ACQ use and sized to suit. Screws to extend into timber base at min. 50mm and to be countersunk into cap. Two parallel screws every 600mm O.C. along length and at ends. Only use butt joints for straight sections of pedra. Min. length of timbers to be 1200mm. Install longest lengths possible.

DIMENSIONS SHOWN ARE IN MILLIMETRES UNLESS OTHERWISE SPECIFIED

REVISION: 2
 DATE: June 25, 2015
 SCALE: NTS
 DRAWN BY: SP

The City of Winnipeg
 Planning, Property and Development Department
 Planning and Land Use Division
 Unit 15 - 30 Fort Street, Winnipeg, MB, R3C 4X5

