


1 DRAINAGE SCUPPER
NTS - ROOF SECTION 3

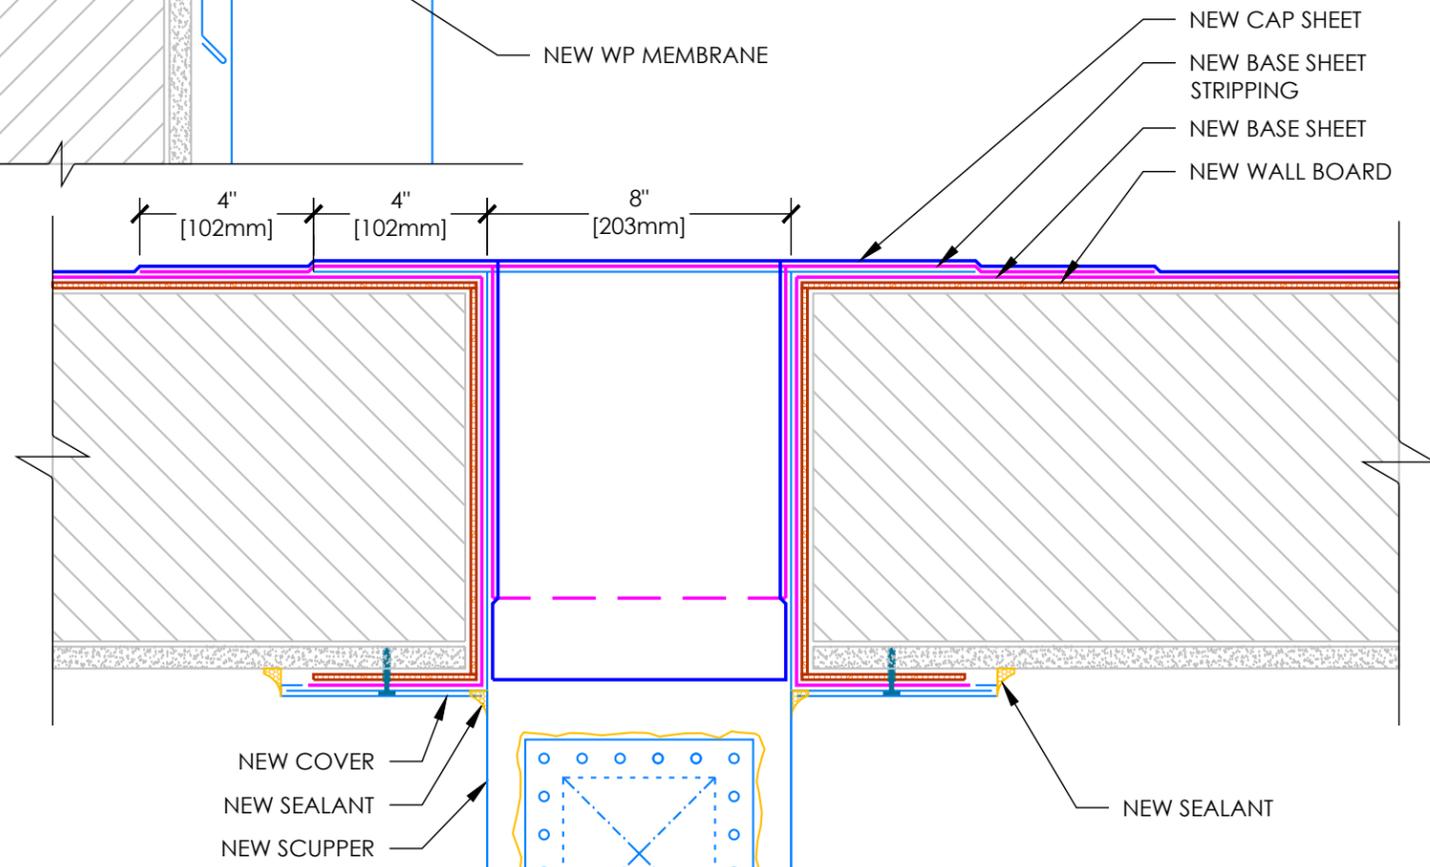

2 DRAINAGE SCUPPER PLAN
NTS - ROOF SECTION 3

GENERAL NOTES

1. SCUPPER MUST BE PREFABRICATED. LAPS MUST BE FULLY SOLDERED.
2. SCUPPER MUST BE INSPECTED BY THE CONSULTANT PRIOR TO INSTALLATION.
3. INSTALL SCUPPER OVER THE BASE SHEET IN A FULL BED OF COMPATIBLE CEMENT IN THE SCUPPER OPENING.
4. FIELD VERIFY DIMENSIONS H & W.

KEY NOTES

1. REFER TO DETAIL 3 ON A 5.01 FOR ROOF COMPOSITION.

RMIS ENGINEERING



389 MAXWELL CRESCENT
Regina, SK S4N 5X9
www.rmiseng.ca
Phone 306.352.4606
Fax 306.352.4607



WESTWOOD LIBRARY
C.13.MB.35-18.02.03

66 ALLARD AVENUE
WINNIPEG, MB R3K 0T3

CITY OF WINNIPEG

4TH FLOOR - 185 KING STREET
WINNIPEG, MB R3B 1J1

No.	DATE	DESCRIPTION

DESIGNED BY SMC 04/27/2018
DRAWN BY SED 04/27/2018
REVIEWED BY SMC 05/03/2018

SCUPPER
DETAILS

A 5.08