


**1** BASE TERMINATION  
NTS


REMOVE MORTAR FROM JOINT TO A DEPTH OF 5/8" [16mm] MIN

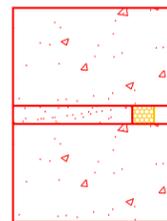


REMOVE ALL DUST AND DEBRIS FROM THE JOINT. APPLY A 1/2" [13mm] BEAD OF SEALANT IN THE JOINT



SET THE REGLET IN THE JOINT 5/8" [16mm] MIN. REGLET SHOULD BE SPRING LOCKED IN THE JOINT. LOCK WITH WEDGES 12" OC. FILL THE JOINT WITH SEALANT AND TOOL

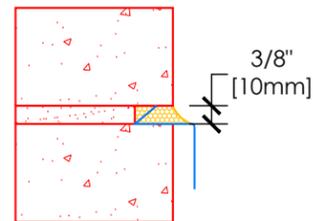

**2** REGLET INSTALLATION  
NTS

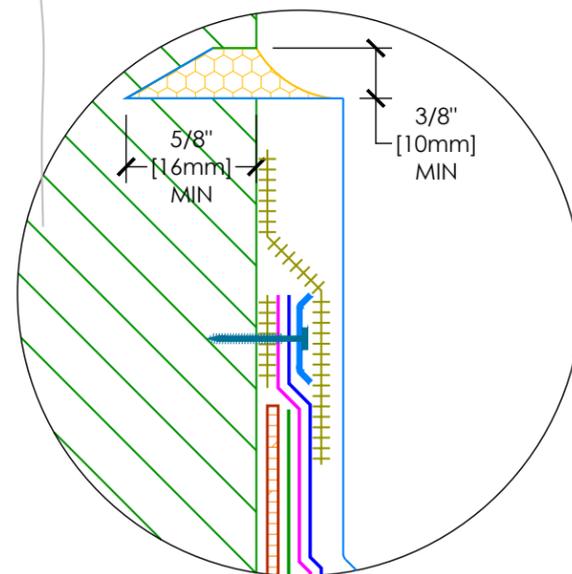

**3** REGLET FLASHING  
NTS

**KEY NOTES**

1. REFER TO DETAIL 1 ON A 5.01 FOR ROOF COMPOSITION.
2. REFER TO DETAIL 2 & 4 ON A 5.01 FOR PERIMETER RESTRAINT AND BASE TIE IN
3. REFER TO DETAIL 3 ON 5.01 FOR MEMBRANE TERMINATION

RMIS ENGINEERING



389 MAXWELL CRESCENT  
Regina, SK S4N 5X9  
www.rmiseng.ca  
Phone 306.352.4606  
Fax 306.352.4607



FIRE HALL #23  
C.13.MB.35-18.05.03

880 DALHOUSIE DRIVE  
WINNIPEG, MB R3T 2Z9

CITY OF WINNIPEG

4TH FLOOR - 185 KING STREET  
WINNIPEG, MB R3B 1J1

No.	DATE	DESCRIPTION

DESIGNED BY SMC 05/04/2018  
DRAWN BY CJB 05/04/2018  
REVIEWED BY SMC 05/04/2018

BASE TERMINATION  
DETAILS

**A 5.05**