

PROJECT SCOPE

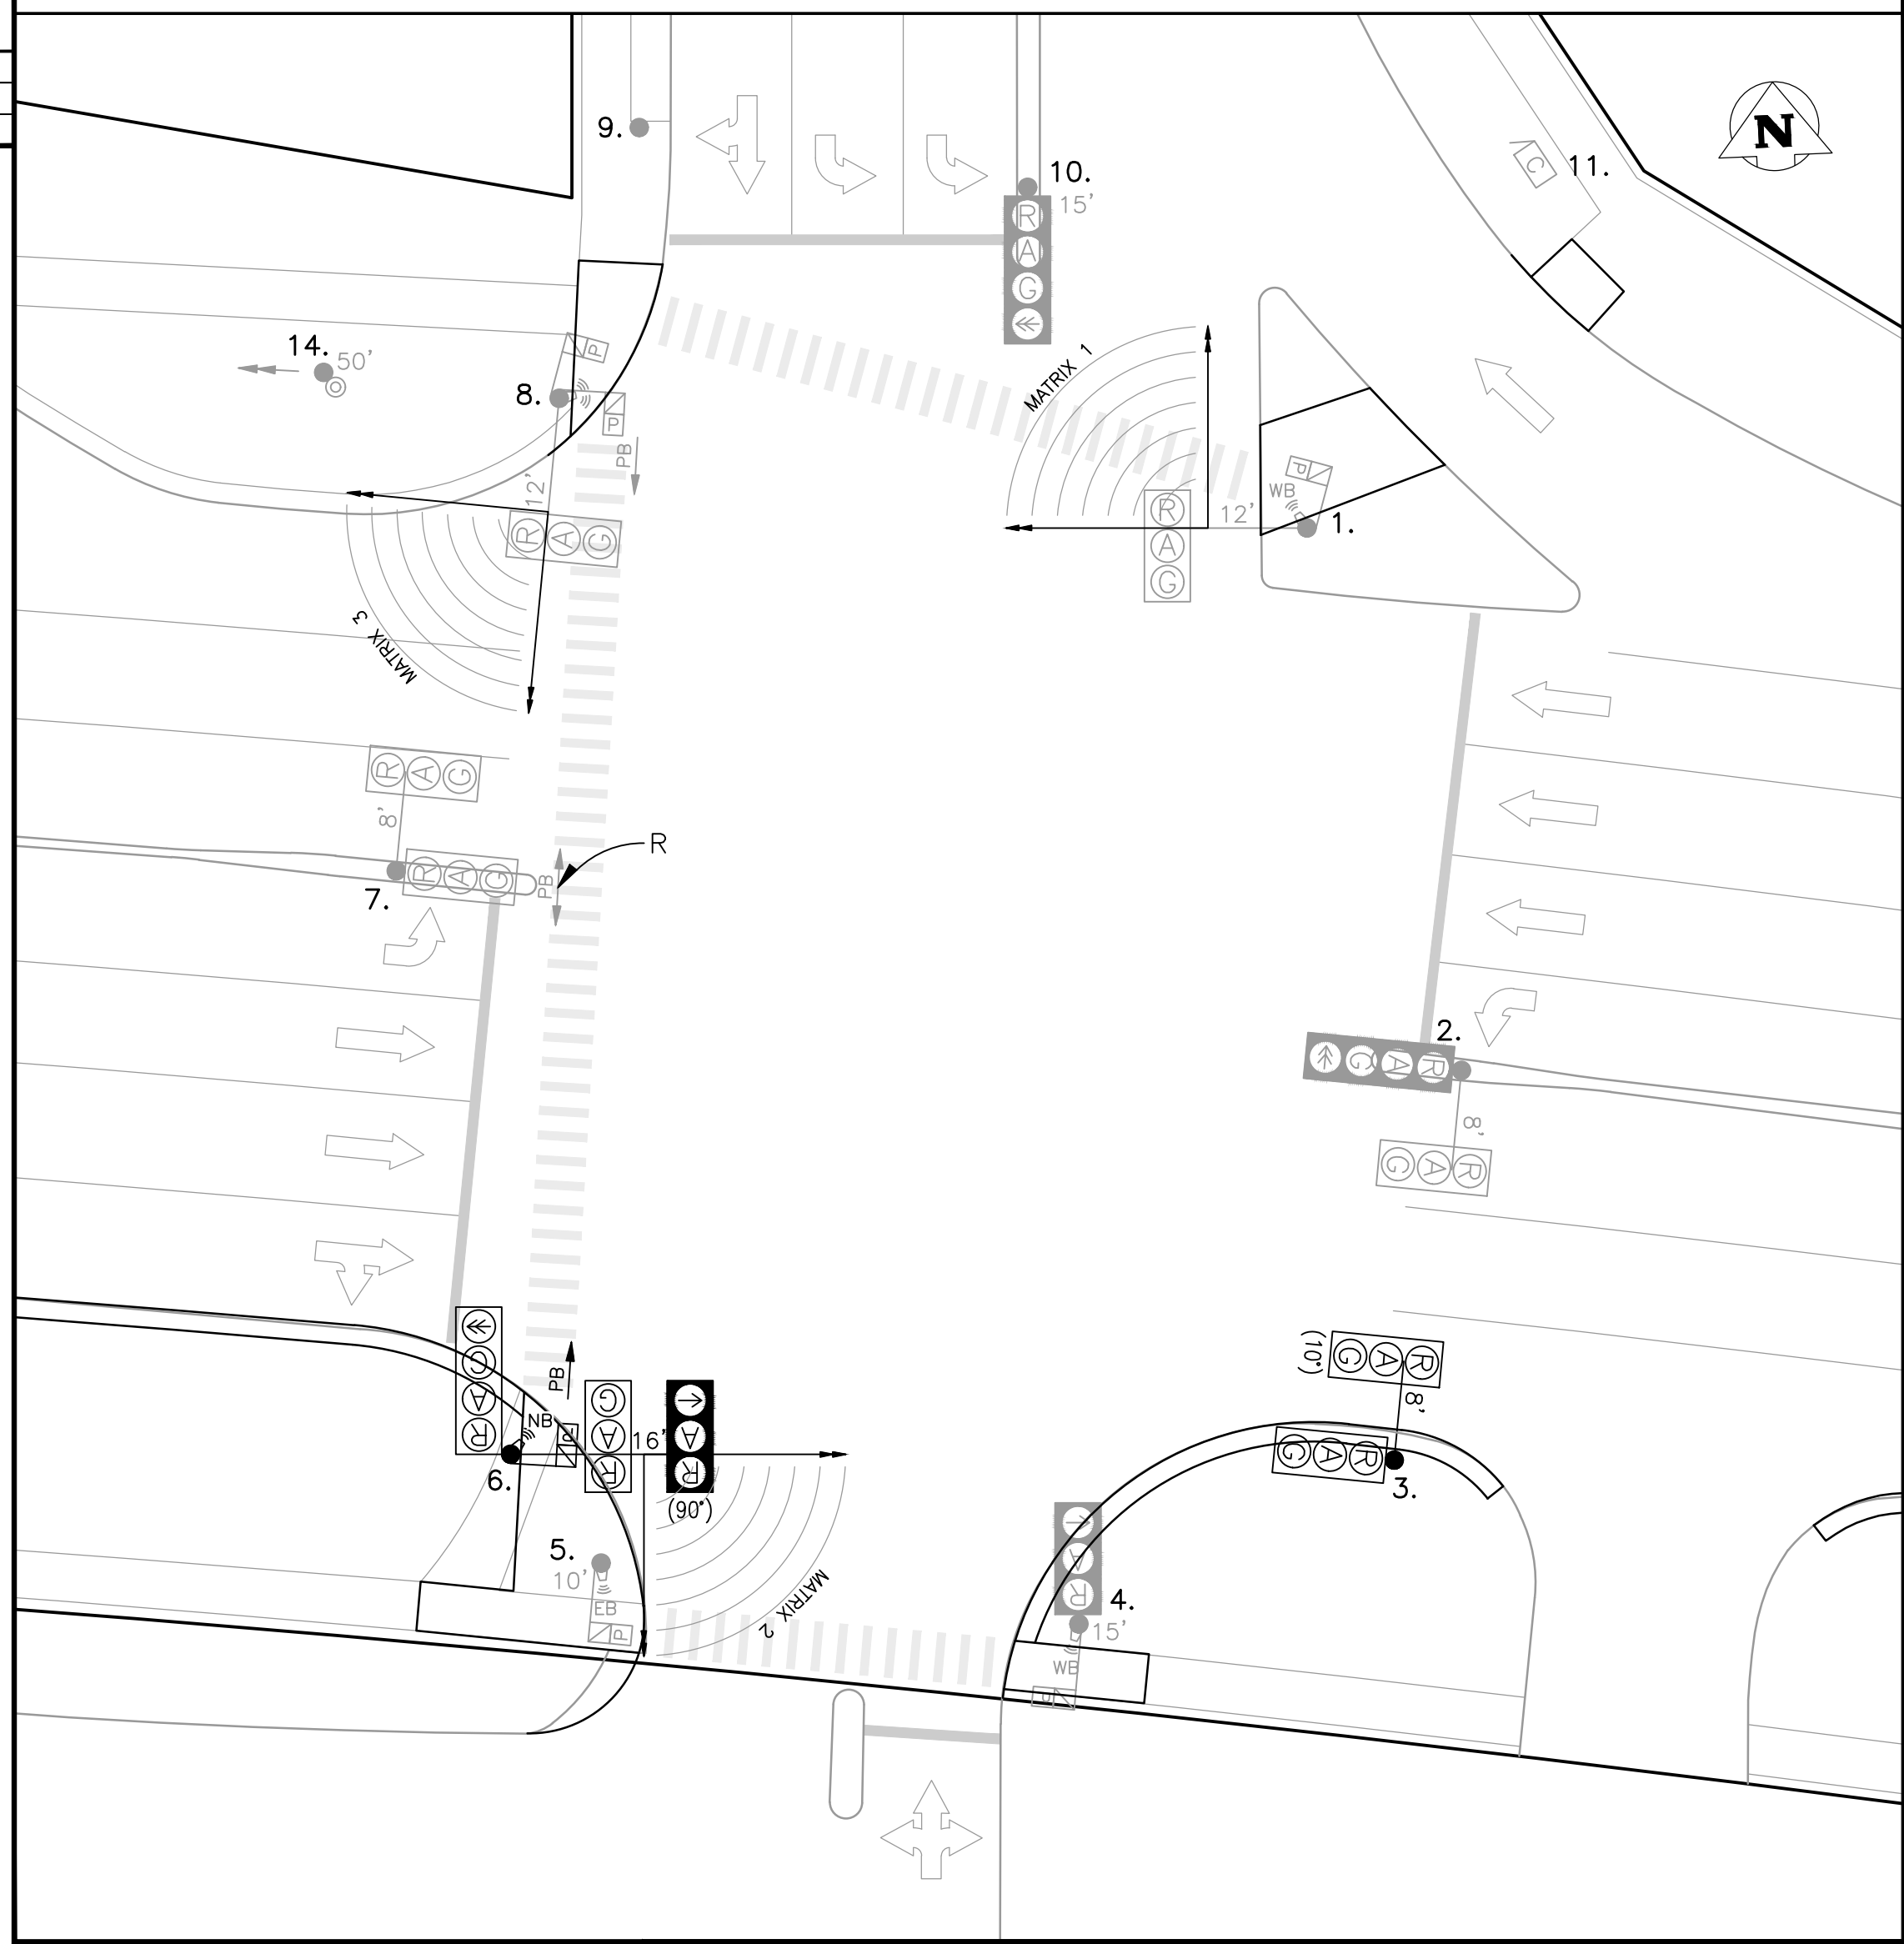
1. INSTALL CONDUIT, BASES AND PIT AS SHOWN.
2. INSTALL EQUIPMENT AS SHOWN. REMOVE BAILOUT PUSHBUTTON AS SHOWN.
3. TIMINGS REQUIRED.

1. COORDINATE WORK WITH (CA's NAME), (204) XXX-XXXX.

DETECTION CONNECTION DETAILS			
SENSOR NO.	POLE NO.	DETECTION LOCATION	NOTES
MATRIX 1	1		
MATRIX 2	6		
MATRIX 3	8		

TRAFFIC SIGNALS EQUIPMENT DISPLAY: N.T.S.
--

CAVALIER DRIVE

[illegible]

INTERNAL REVIEW			
TIMINGS (INITIAL):			
	NEW TIMING?	DATE	INITIALS
TIMINGS (PRE-IFC):			
	NEW TIMING?	DATE	INITIALS
OPERATIONS:			
	DAYS REQUIRED	DATE	INITIALS
UNDERGROUND CONSTRUCTIBILITY:			
	DAYS REQUIRED	DATE	INITIALS
LAB:			
	REQUIRE IFC DWG?	DAYS REQUIRED	DATE
TMC:			
		DATE	INITIALS
STREET LIGHTING:			
		DATE	INITIALS
TRAFFIC MANAGEMENT:			
		DATE	INITIALS

PLAN VIEW: UNDERGROUND CONSTRUCTION

1:250

[illegible]

\\Traffic Signals\01. Intersections\Cavaller & Portage S-1480\02. Design\Preliminary_Cavaller & Portage S-1480.dwg