	INCTO	IMENIT AND E	ACTION IDENTIFIE	DATION TABLE			
	INSTRU	MENI AND L	DEVICE IDENTIFICATION TABLE				
	FIRST-LETTEF	7	SUCCEEDING-LETTERS				
	MEASURED OR INITIATING VARIABLE	MODIFIER	READOUT OR PASSIVE FUNCTION	OUTPUT FUNCTION	MODIFIER		
Α	ANALYSIS OR SAMPLER		ALARM, TROUBLE				
В	BURNER FLAME				CLOSE, DECREASE (1)		
С	CONDUCTIVITY			CONTROL			
D	DENSITY	DIFFERENTIAL			OPEN, INCREASE (1)		
Ε	VOLTAGE (EMF)		SENSOR (PRIMARY ELEMENT)				
F	FLOW RATE	RATIO (FRACTION)	FAILURE				
G	GAS		GLASS, VIEWING DEVICE, GUAGE (2)	GENERATOR (ULTRASONIC)			
Н	HAND (MANUAL)				HIGH		
_	CURRENT (ELECTRICAL)		INDICATE				
٦	POWER	SCAN					
K	TIME	TIME RATE OF CHANGE		CONTROL STATION			
L	LEVEL		LIGHT (3)		LOW		
М	MOTOR	MOMENTARY	OPERATE, ON/OFF		MIDDLE, INTERMEDIATE		
Ν	MOISTURE			START			
0	TORQUE		ORIFACE, RESTRICTION	STOP, OVERLOAD			
Р	PRESSURE, VACUUM		POINT (TEST CONNECTION)				
Q	COMMON, QUANTITY	INTEGRATE, TOTALIZE					
R	RADIOACTIVITY		RECORD				
S	SPEED, FREQUENCY	SAFETY		SWITCH			
Т	TEMPERATURE		TRANSMITTER				
U	MULTIVARIABLE		MULTIFUNCTION	MULTIFUNCTION	MULTIFUNCTION		
٧	VIBRATION, MECHANICAL ANALYSIS, VALVE, DAMPER (4)			VALVE, DAMPER, LOUVER			
W	WEIGHT, FORCE		WELL				
Х	UNCLASSIFIED (5)	X AXIS	UNCLASSIFIED (5)	UNCLASSIFIED (5)	UNCLASSIFIED (5)		
Υ	EVENT, STATE, OR PRESENCE	Y AXIS		RELAY, COMPUTE, CONVERT			
Z	POSITION	Z AXIS		DRIVER, ACTUATOR, UNCLASSIFIED FINAL CONTROL ELEMENT			

NOTES FOR INSTRUMENT AND DEVICE IDENTIFICATION TABLE:

- WHEN THE B AND D LETTERS ARE TO REPRESENT AN OPEN AND CLOSED COMMAND OR POSITION, THEY ARE CURRENTLY OFTEN USED NOT AS A MODIFIER, BUT RATHER AS A READOUT OR OUTPUT FUNCTION. FOR EXAMPLE, SB RATHER THAN SCB.
- 2. IN CURRENT DRAWINGS, THE LETTER G IS OFTEN USED TO REPRESENT A GAUGE AS IN TG (TEMPERATURE GAUGE). HOWEVER, SINCE A TEMPERATURE GAUGE USUALLY HAS A SCALE TO READ A SPECIFIC TEMPERATURE, IT WOULD MORE CORRECTLY BE CALLED AN INDICATOR (TI). GAUGE IS INCLUDED FOR HISTORICAL REASONS.
- 3. ON CURRENT NEWPCC P&ID DRAWINGS, THE PILOT LIGHTS USUALLY OMIT THE L DESIGNATION. FOR EXAMPLE, A VALVE OPEN PILOT LIGHT IS DESIGNATED AS ZD. TECHNICALLY, THE APPROPRIATE IDENTIFIER IS ZLD, BUT ZD HAS BEEN MAINTAINED FOR HISTORICAL REASONS.
- 4. THE USE OF V AS AN INITIAL LETTER HAS BEEN INCORRECTLY USED IN THE PAST TO REPRESENT A VALVE OR A DAMPER, AND IS MAINTAINED IN THE IDENTIFICATION TABLE DUE TO ITS COMMON USE AS SUCH. HOWEVER, THESE INSTRUMENTS SHOULD IDEALLY BE RENAMED TO THE APPROPRIATE IDENTIFIERS. FOR EXAMPLE, MOST VY INSTRUMENTS (PNEUMATIC RELAYS) ON THE CURRENT DRAWINGS COULD BE RELABELLED AS HY OR FY
- THE LETTER X IS TO BE DEFINED AT THE TIME OF USE, AND MAY BE USED FOR MULTIPLE DEFINITIONS WHERE NO OTHER LETTER IS APPLICABLE.

	INSTRUMENT FIELD	DEVICE IDE	MIII ILINO
IDENTIFIER	DEFINITION	IDENTIFIER	
AAH	ANALYSIS ALARM - HIGH	PSHH	PRESSURE S
AAHH AE	ANALYSIS ALARM - HIGH-HIGH	PSL PSV	PRESSURE S
AE AIT	ANALYSIS ELEMENT ANALYSIS INDICATING TRANSMITTER (ANALYTIC INST.)	PT	PRESSURE T
AK	ANALYSIS (AMPLER) CONTROL STATION	PY	PRESSURE R
ASH	ANALYSIS SWITCH - HIGH	SI	SPEED INDIC
ASHH	ANALYSIS SWITCH - HIGH-HIGH	SK	SPEED CONT
ASY	ANALYSIS SAFETY RELAY	ST	SPEED TRANS
AT BK	ANALYSIS TRANSMITTER (ANALYTIC INST.) BURNER CONTROL STATION	TE TG	TEMPERATURI TEMPERATURI
BS	BURNER FLAME SWITCH	TI	TEMPERATUR
BV	BURNER VALVE	TIC	TEMPERATUR
DE	DENSITY ELEMENT	TIT	TEMPERATUR
DR	DENSITY RECORDER	TR	TEMPERATUR
DT DX	DENSITY TRANSMITTER DENSITY SOURCE (X = SOURCE)	TSH TSL	TEMPERATUR TEMPERATUR
EE	VOLTAGE ELEMENT/TRANSFORMER	П	TEMPERATUR
El	VOLTAGE INDICATOR	TV	TEMPERATUR
ET	VOLTAGE TRANSMITTER	TW	TEMPERATUR
FE	FLOW ELEMENT	TY	TEMPERATURI
FG FI	FLOW METER ULTRASONIC GENERATOR FLOW INDICATOR	XE XI	VELOCITY ELI
FIC	FLOW INDICATING CONTROLLER	XK	UNCLASSIFIE
FIT	FLOW INDICATING TRANSMITTER	XT	POWER FACT
FQI	FLOW TOTALIZING INDICATOR	XT	VELOCITY TRA
FQY	FLOW TOTALIZING / INTEGRATING RELAY	XX	UNCLASSIFIE
FR	FLOW RECORDER	YS	COMPUTER S
FRC	FLOW RECORDING CONTROLLER	YSA	STATE SAFET
FRQ FSL	FLOW RECORDING TOTALIZER FLOW SWITCH LOW	YSL ZI	STATE SAFET POSITION INC
FT	FLOW TRANSMITTER	ZS	POSITION SW
FV	FLOW VALVE	ZSB	POSITION SW
FY	FLOW COMPUTER / RELAY	ZSDL	POSITION SW
GE	GAS ELEMENT	ZSH	POSITION SW
GS HK	GAS SWITCH MODULE HAND CONTROL STATION	ZSL ZT	POSITION SW POSITION TRA
HS	HAND SWITCH		
HSS	HAND SAFETY SWITCH	NOTES F	<u>or instf</u>
HV	HAND VALVE	1. THE LAS	T IDENTIFIER L
IS	CURRENT SWITCH		BLE IS DERIVE
IE II	CURRENT ELEMENT/TRANSFORMER CURRENT INDICATOR	TABLE, /	AND IS NOT E
IY	CURRENT RELAY		
KY	TIMER RELAY		
LCV	LEVEL CONTROL VALVE		
LE	LEVEL ELEMENT		
LI	LEVEL INDICATING CONTROLLER		
LIC	LEVEL INDICATING CONTROLLER LEVEL INDICATING TRANSMITTER	-	
LR	LEVEL RECORDER		
LSL	LEVEL SWITCH LOW		
LSH	LEVEL SWITCH HIGH		
LSHL	LEVEL SWITCH HIGH/LOW		
LT LV	LEVEL TRANSMITTER LEVEL VALVE	•	
LY	LEVEL RELAY (I/I CONVERTER)	1	
MB	MOTOR DECREASE OR REVERSE	1	
MD	MOTOR INCREASE OR FORWARD		
MF	MOTOR FAILURE		
MM NS	MOTOR RUN MOISTURE SWITCH	-	
PCV	PRESSURE CONTROL VALVE	1	
PE	PRESSURE ELEMENT		
PG	PRESSURE GAUGE		
PI	PRESSURE INDICATOR		
PIC	PRESSURE INDICATING CONTROLLER		
PIT	PRESSURE INDICATING TRANSMITTER	ł	
PR PS	PRESSURE RECORDER PRESSURE SWITCH	1	
PSH	PRESSURE SWITCH HIGH	1	

	INSTINUMENT FILLD	DEVICE IDE	IVIII ILIVO
ENTIFIER	DEFINITION	IDENTIFIER	DEFINITION
AAH	ANALYSIS ALARM - HIGH	PSHH	PRESSURE SWITCH HIGH (2ND STAGE)
AAHH	ANALYSIS ALARM - HIGH-HIGH	PSL	PRESSURE SWITCH LOW
AE	ANALYSIS ELEMENT	PSV	PRESSURE SAFETY VALVE (RELIEF)
AIT	ANALYSIS INDICATING TRANSMITTER (ANALYTIC INST.)	PT	PRESSURE TRANSMITTER
AK	ANALYSIS (AMPLER) CONTROL STATION	PY	PRESSURE RELAY (I/I CONVERTER)
ASH	ANALYSIS SWITCH - HIGH	SI	SPEED INDICATOR
ASHH	ANALYSIS SWITCH - HIGH-HIGH	SK	SPEED CONTROL STATION
ASY	ANALYSIS SAFETY RELAY	ST	SPEED TRANSMITTER
AT	ANALYSIS TRANSMITTER (ANALYTIC INST.)	TE	TEMPERATURE ELEMENT
BK	BURNER CONTROL STATION	TG	TEMPERATURE GAUGE
BS	BURNER FLAME SWITCH	TI	TEMPERATURE INDICATOR
BV	BURNER VALVE	TIC	TEMPERATURE INDICATING CONTROLLER
DE	DENSITY ELEMENT	TIT	TEMPERATURE INDICATING TRANSMITTER
DR	DENSITY RECORDER	TR	TEMPERATURE RECORDER
DT	DENSITY TRANSMITTER	TSH	TEMPERATURE SWITCH HIGH
DX	DENSITY SOURCE (X = SOURCE)	TSL	TEMPERATURE SWITCH LOW
EE	VOLTAGE ELEMENT/TRANSFORMER	П	TEMPERATURE TRANSMITTER
El	VOLTAGE INDICATOR	TV	TEMPERATURE VALVE
ET	VOLTAGE TRANSMITTER	TW	TEMPERATURE THERMOWELL
FE	FLOW ELEMENT	ΤΥ	TEMPERATURE RELAY (SOLENOID VALVE OR M/P)
FG	FLOW METER ULTRASONIC GENERATOR	XE	VELOCITY ELEMENT
FI	FLOW INDICATOR	ΧI	VELOCITY INDICATOR
FIC	FLOW INDICATING CONTROLLER	XK	UNCLASSIFIED CONTROL STATION (X = FIRE)
FIT	FLOW INDICATING TRANSMITTER	XT	POWER FACTOR TRANSMITTER
FQI	FLOW TOTALIZING INDICATOR	XT	VELOCITY TRANSMITTER (X = VELOCITY)
FQY	FLOW TOTALIZING / INTEGRATING RELAY	XX	UNCLASSIFIED (XX = ALARM ANNUNCIATOR)
FR	FLOW RECORDER	YS	COMPUTER SWITCH
FRC	FLOW RECORDING CONTROLLER	YSA	STATE SAFETY ALARM
FRQ	FLOW RECORDING TOTALIZER	YSL	STATE SAFETY LIGHT
FSL	FLOW SWITCH LOW	ZI	POSITION INDICATOR
FT	FLOW TRANSMITTER	ZS	POSITION SWITCH
FV	FLOW VALVE	ZSB	POSITION SWITCH CLOSED (LIMIT SWITCH)
FY	FLOW COMPUTER / RELAY	ZSDL	POSITION SWITCH OPEN (LIMIT SWITCH)
GE	GAS ELEMENT	ZSH	POSITION SWITCH HIGH
GS	GAS SWITCH MODULE	ZSL	POSITION SWITCH LOW
HK	HAND CONTROL STATION	ZT	POSITION TRANSMITTER
HS	HAND SWITCH		
HSS	HAND SAFETY SWITCH	NOTES F	<u>OR INSTRUMENT FIELD DEVICE IDENTIFIEF</u>
HV	HAND VALVE	1. THE LAS	T IDENTIFIER LETTER IS IN SOME CASES OPTIONAL (EG. FSL)
IS	CURRENT SWITCH		BLE IS DERIVED FROM THE INSTRUMENT & DEVICE IDENTIFICATION
IE	CURRENT ELEMENT/TRANSFORMER		AND IS NOT EXHAUSTIVE.

TABLE, AND IS NOT EXHAUSTIVE.


IDENTIFIER	DEFINITION N MULTIPLE INSTRUMENTS				
(N)					
AA	AUDIBLE ALARM				
A/M	AUTO / MANUAL				
C/L	COMPUTER / LOCAL				
CLS	CLOSE				
C/O	COMPUTER / OFF				
COB	COMPUTER / OFF / BYPASS				
COH	COMPUTER / OFF / HAND				
	· · ·				
COT	COMPUTER / OFF / TIME DISTRIBUTED CONTROL SYSTEM				
DCS DS	DECREASE SPEED				
E/S	EMERGENCY STOP				
FOR	FORWARD / OFF / REVERSE				
H/A	HAND / AUTO				
HOA	HAND / OFF / AUTO				
HOR	HAND / OFF / REMOTE				
I/D	INCREASE / DECREASE				
INT/EXT	INTERNAL / EXTERNAL				
IS	INCREASE SPEED				
LCP	LOCAL CONTROL PANEL				
LD	LOCKABLE DISCONNECT				
LJB	LOCAL JUNCTION BOX				
L/0	LOCAL / OFF				
LOR	LOCAL / OFF / REMOTE				
LOS	LOCK OFF STOP				
L/R	LOCAL / REMOTE				
LSR	LOCAL / STOP / REMOTE				
MCC	MOTOR CONTROL CENTER				
0/A	OFF / AUTO				
0/C	OPEN / CLOSE				
0/M	OFF / MAINTENANCE				
0/0	OFF / ON				
OPN	OPEN				
RST	RESET				
RTD	RESISTIVE TEMPERATURE DEVICE				
SEL	SELECTOR				
S/F	SLOW / FAST				
SOF	SLOW / OFF / FAST				
SOL	SOLENOID				
s/s	START / STOP				
S/W	SUMMER / WINTER				
TAH	TEMPERATURE ALARM HIGH				
TAL	TEMPERATURE ALARM LOW				
TSH	TEMPERATURE SWITCH HIGH				
TSL T (0	TEMPERATURE SWITCH LOW				
T/C VIB	THERMOCOUPLE VIBRATION				

INSTRUMENT FIELD DEVICE NUMBERING

 INSTRUMENT IDENTIFICATION MODIFIER - LOOP OR DEVICE NUMBER (001-999)


- INSTRUMENT ID - MAX. OF 4 LETTERS AS PER IDENTIFICATION TABLE - DEVICE SUFFIX FOR MULTIPLE DEVICES ON THE SAME LOOP

CONTROL SYSTEM (DCS) POINT TAG NUMBERING

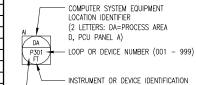


PLC POINT TAG NUMBERING

- PROCESS AREA IDENTIFIER

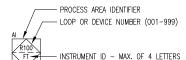

AS PER IDENTIFICATION TABLE - DEVICE SUFFIX FOR MULTIPLE DEVICES ON THE SAME LOOP

OR

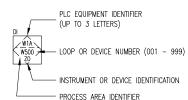

- PROCESS AREA IDENTIFIER

THIS DRAWING IS BASED ON CITY OF WINNIPEG DRAWING NUMBER 1-0101A-D-A0001-002-06D

APEGM	B.M. ELEV.		EarthTech A Tyco International Ltd. Company			Winnipeg WATER AND WASTE DEPARTMENT ENGINEERING DIVISION			
Certificate of Authorization					DESIGNED BY LAE	CHECKED CGL	Q. MENG	NEWPCC	CITY FILE NUMBER
Earth Tech Canada Inc.					DRAWN BY LAE	APPROVED BY HH	2007/01/26	GRIT HANDLING UPGRADES CONTRACT 1	SHEET ₂ OF 3
No. 730 Expiry: April 30, 2007					HOR. SCALE: NONE VERTICAL SCALE:	RELEASED FOR CONSTRUCTION BY:		PROCESS	CITY DRAWING NUMBER
	00	ISSUED FOR TENDER	07/01/26	GLG	VENTIONE SONCE.	K. MARTENS CONSULTANT DRAWING NO.	PROCESS AND INSTRUMENTATION DIAGRAMS		
	NO.	REVISIONS	DATE	BY	DATE 2006/07/08	DATE 2007/01/26	P3.02	LEGEND AND DETAILS	